LINOFILM

KEYBOARD UNIT
INSTRUCTION MANUAL

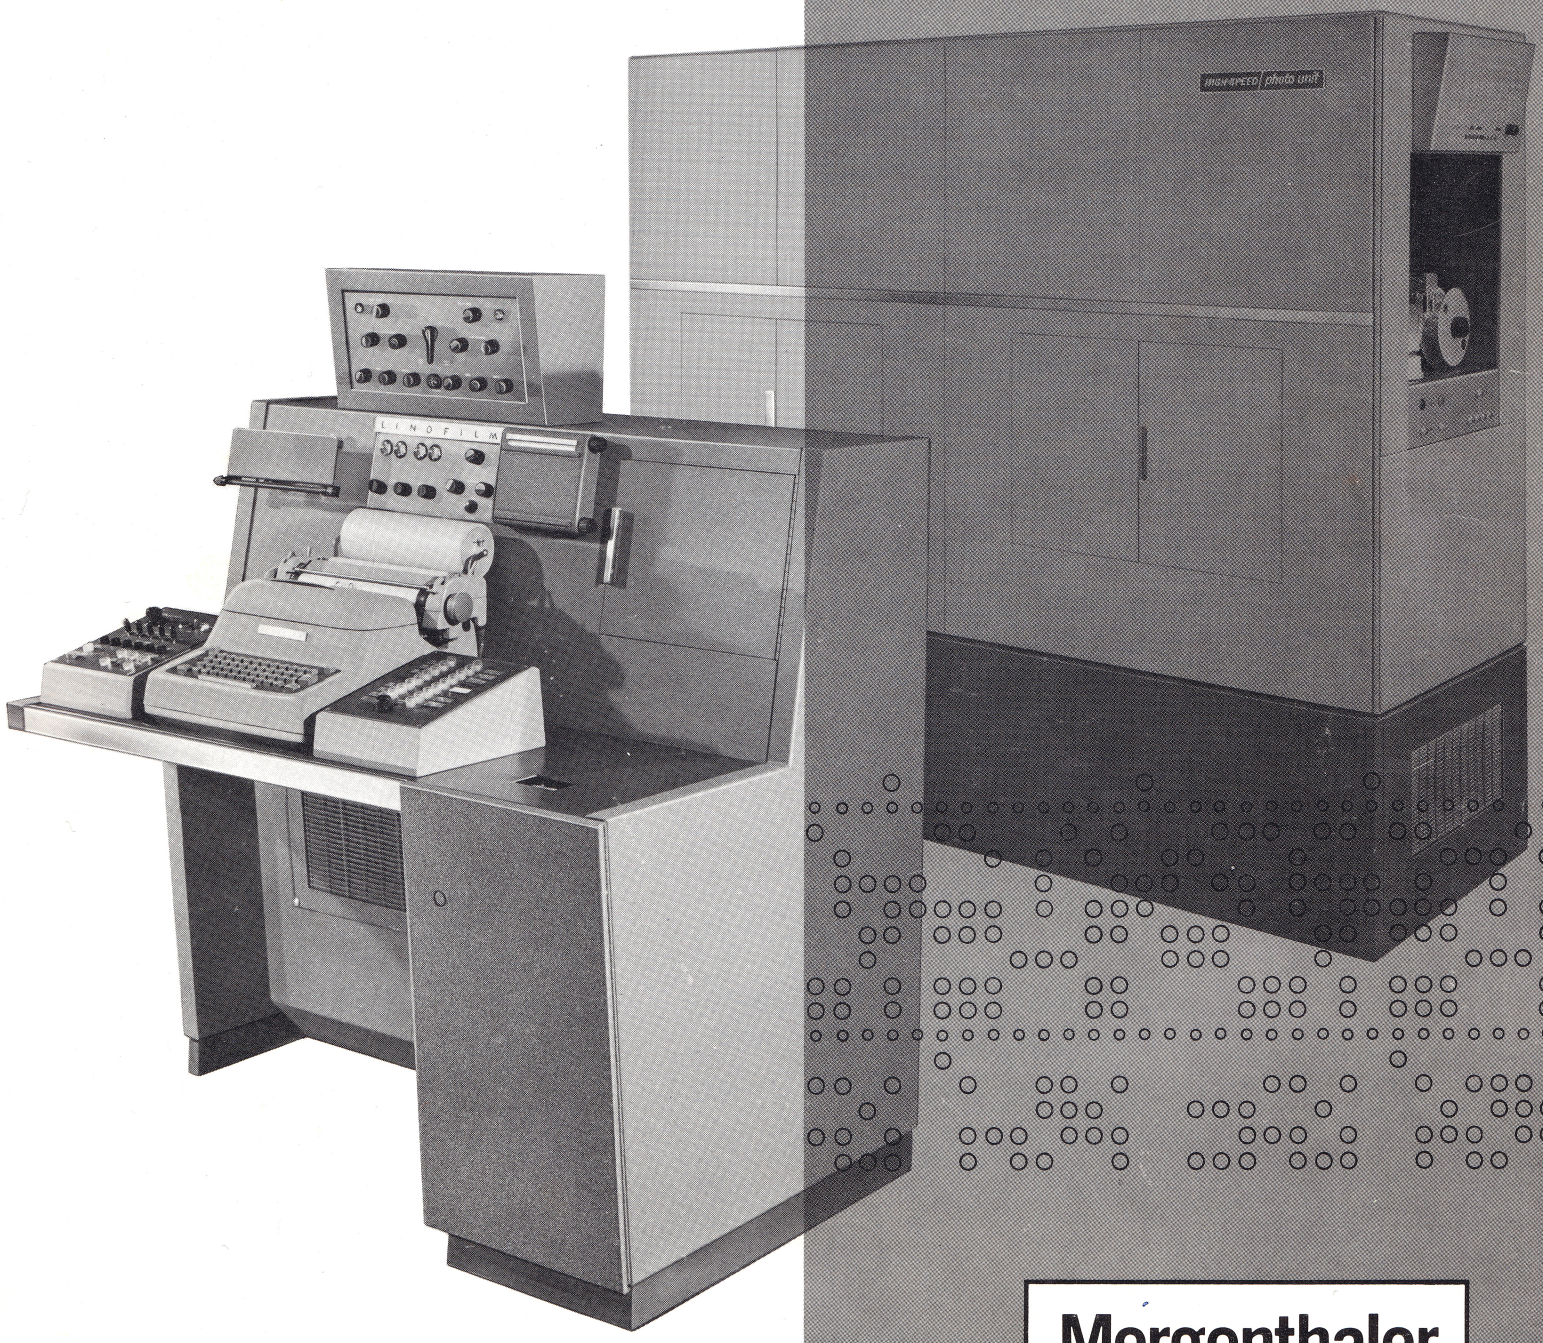

Mergenthaler

CONTENTS

	PAGE
INTRODUCTION: TYPE	1
FEATURES OF A TYPE CHARACTER	1
POINTS; POINT SIZE	1
THE LINOFILM KEYBOARD UNIT	2
THE ELECTRIC TYPEWRITER	3
THE COMPUTER PANEL	3
THE LEFT-HAND CONSOLE PANEL	4
THE RIGHT-HAND CONSOLE PANEL	4
WIDTH CARDS	4
THE PERFORATOR	5
GRID RANGES	5
TO OPERATE THE KEYBOARD UNIT	6
REMOVING TAPE	6
SETTING UP THE JOB	7
POINT SIZE	7
FILM ADVANCE	7
LINE LENGTH	7
RECORD	8
TYPE FACE	8
SPACEBAR WIDTH	9
QUAD SPACES	10
UNIT SPACES	10
TAPE ADVANCE; STOP PHOTO	11
KEYBOARD UNIT SETUP: REVIEW	12
LINE ENDING FUNCTIONS	12
LINOMIX	13

Linofilm Keyboard Instruction Manual

INTRODUCTION: TYPE

As background for the study of Linofilm machine operation, it is worthwhile to review briefly some basic facts about typesetting and type. Linofilm is a relatively recent innovation, but its features were designed to meet the needs of the 500-year-old printing art. These needs, in turn, reflect the problems of effectively recording written intelligence.

FEATURES OF A TYPE CHARACTER

A type character is a single letter, numeral, punctuation mark or similar symbol. The type characters printed by an ordinary typewriter all occupy the same amount of space. (They fit into a rectangular area of fixed size and shape—twice as high as it is wide). Characters produced by most printing-industry typesetting methods, however, are different. The amount of horizontal space they occupy varies—for example, from a slim "I" to a fat "W."

The width of a type character actually includes not only the width of the final printed symbol itself. It also includes some white space to each side of it that has been designed as a feature of that character. These spaces (see illustration), called left and right side bearings, are necessary for legibility and appearance of composition.

Similar spaces, designed for similar reasons, are provided above and below the actual type characters. They are called the head and foot spaces. Because they are present, letters in a line of type do not normally touch letters in the preceding and following lines. Head and foot spaces and side bearings, like many other features of type characters, come to us from the days when all typesetting was performed by assembling individual metal types. (See illustration.)

Another distinctive feature of type is the manner in which the characters rest on an imaginary line called the Z line. Extensions on some characters, denoted descenders, go well below the Z line. Likewise lowercase letters (those which are not capital letters) mostly are designed to fit under an imaginary line whose position is called the X height. Some lowercase letters have ascenders which rise above this line.

POINTS; POINT SIZE

The size of type is measured in units called points. A point is close to 1/72 inch or .014 inch. Point size is measured as the total height of the type including the head and foot space (see preceding subsection).

In estimating the point size of printed type, it is necessary to allow for ascenders and descenders, plus a small additional amount of height for head and foot space. It is difficult to estimate point size by measuring a line of capital letters alone, because descenders are absent. With experience, however, this can be done.

Certain particular sizes of type in points are considered standard and are in common use. Those produced by Linofilm run from 6 to 54 points (abbreviated pt.) with most work being done at and below 36 pt. Details on point size ranges in the Linofilm System are given later.

Point sizes of about 12 pt. and smaller are generally considered text or "straight matter" sizes suited for composing bulk reading matter. Sizes above 12 pt. tend to be limited to use in headings and display lines—though there are exceptions such as children's books.

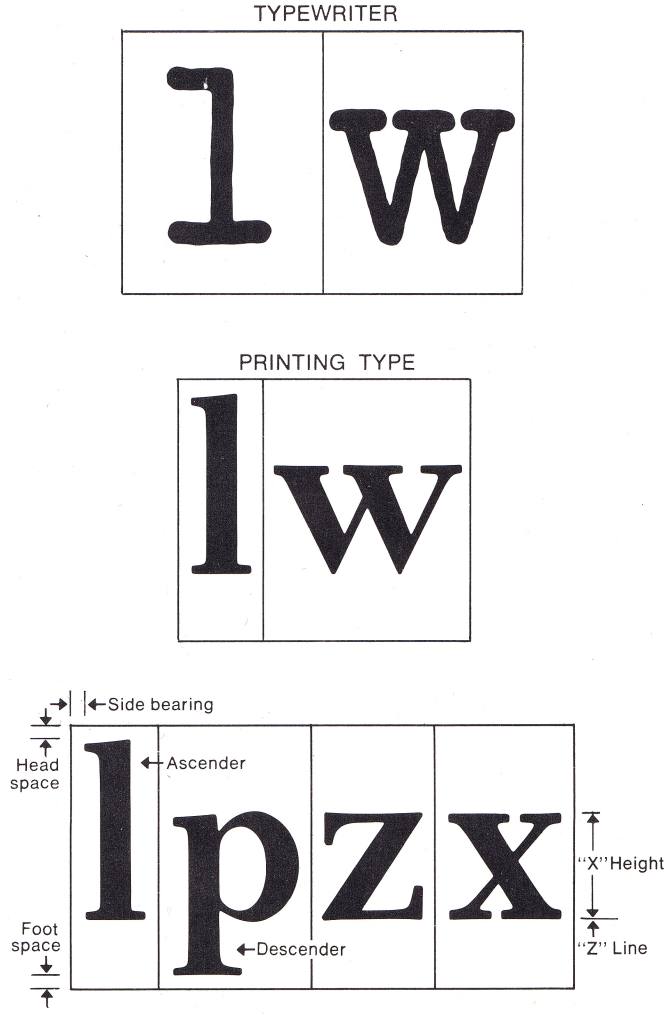

Major features of type characters.

THE LINOFILM KEYBOARD UNIT

The Keyboard Unit is a keyboard-controlled computing tape perforator. It punches a special 15-level paper tape which then controls all actual typesetting functions in the fully automatic Linofilm Photographic Unit.

An operator seated at a Keyboard Unit will be concerned with the following components of the machine:

(1) An electric typewriter
(2) Left-hand console panel
(3) Right-hand console panel
(4) Computer indicator panel
(5) Width card bin
(6) Tape perforator
(7) Pica-em conversion chart (and layout chart)
(8) Copy holder

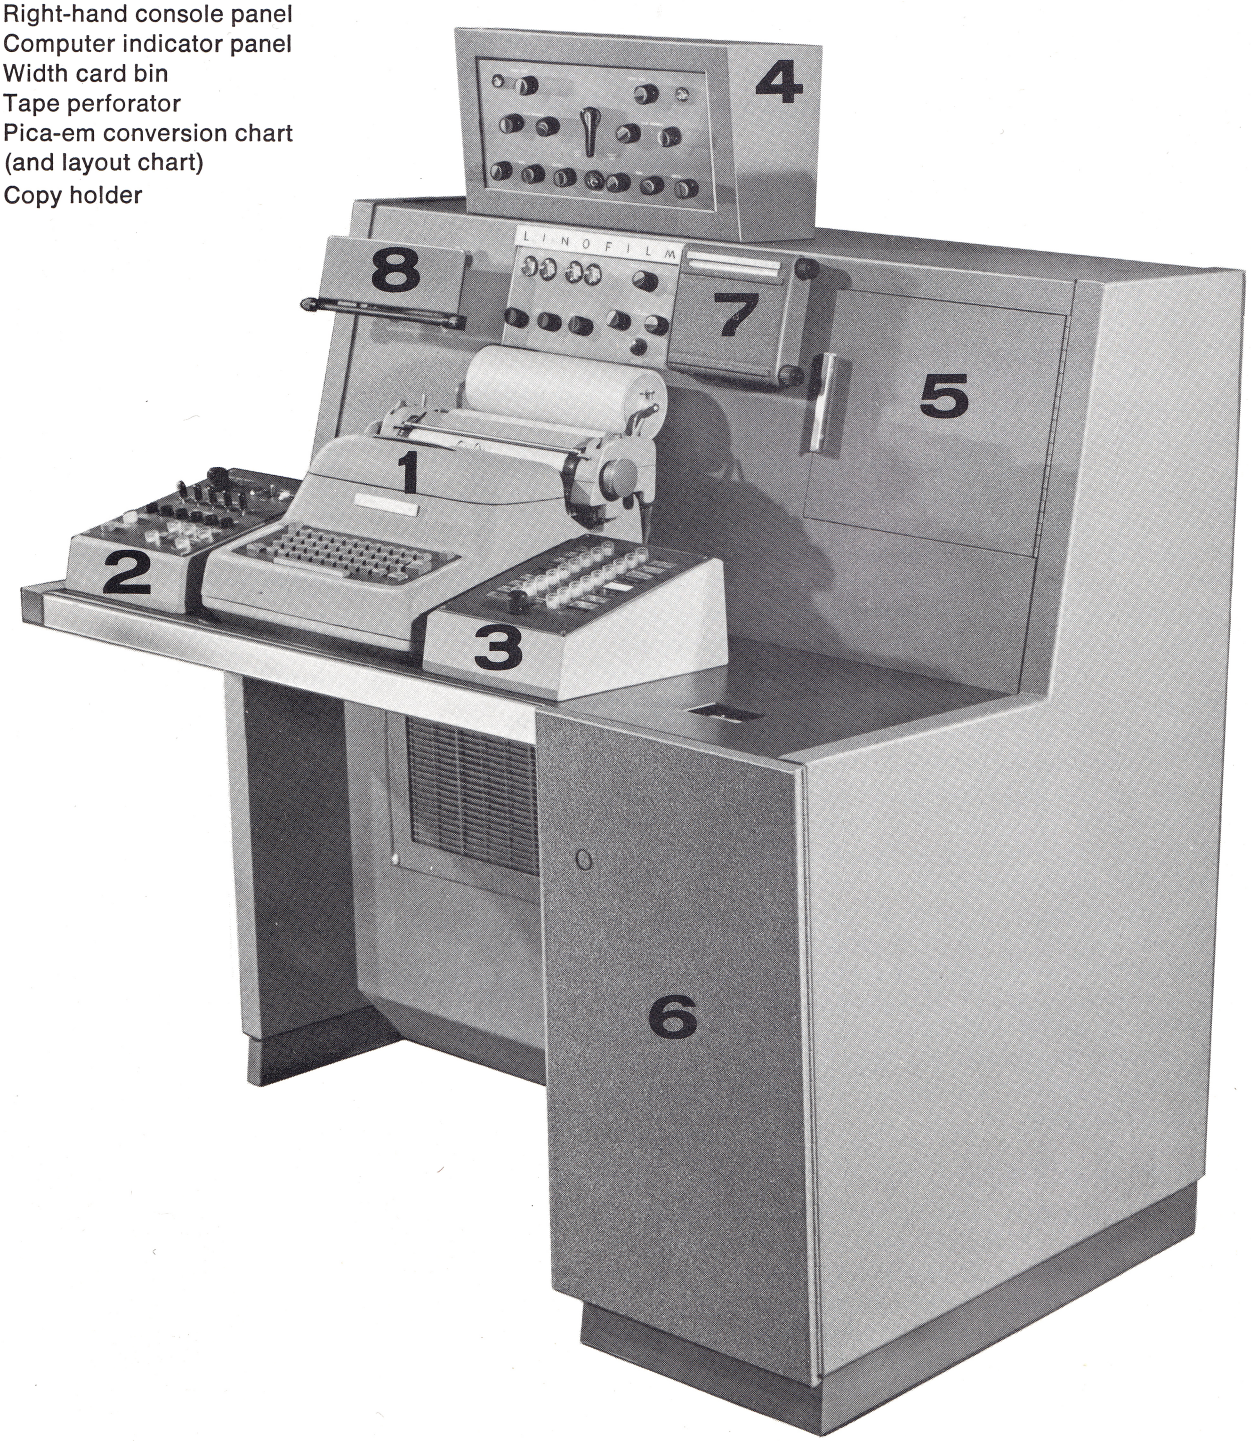

Standard typewriter equipped with paper roll and other special features.

THE ELECTRIC TYPEWRITER

The electric typewriter of the Keyboard Unit is operated like any ordinary electric typewriter with minor exceptions: (a) Depending on the type font being set, some characters will be in non-standard positions; (b) Shift and unshift with left- and right-hand keybuttons, respectively, as in Teletype and Teletypesetter keyboarding; (c) Normally you don't use Carriage Return key. Return is automatic when you justify, quad, center or kill a line.

THE COMPUTER PANEL

Located directly above the typewriter, the computer panel includes four "nixie" indicator tubes that tell you exactly how much space, in Ems and Units, is left in the line you are setting at any time.

Also, control knobs on this panel are used for setting the following information at the beginning of a job or when any of these facts about the job must be changed:

Point Size—Height of type in "points."
Line Length—Width of the line in Ems and Units.
Film Advance—Type size plus added space desired between lines.

Finally there is the "Record" button that must be pushed to record these facts in the form of coded tape perforations every time point size, line length and film advance are set up or changed.

Computer panel on Keyboard Unit provides major operator indications and controls.

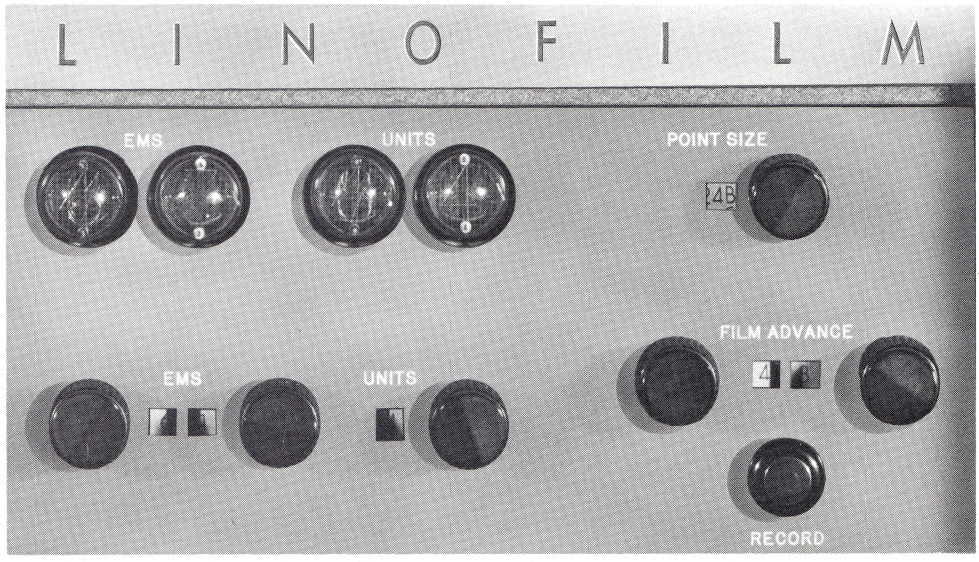

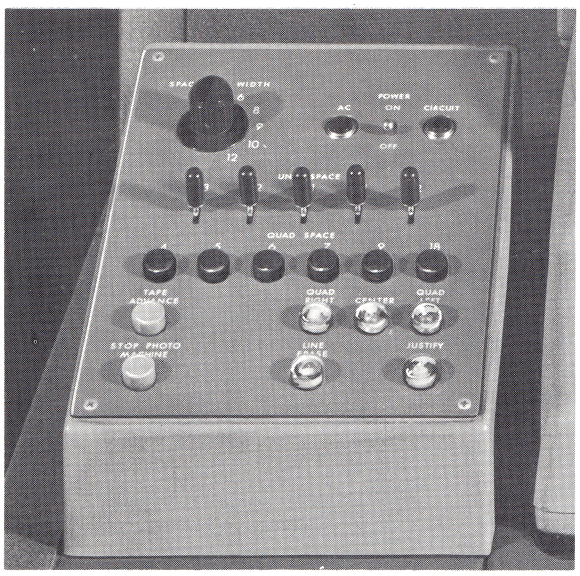

Left-hand Console Panel, with controls relating to spacing and line ending, etc.

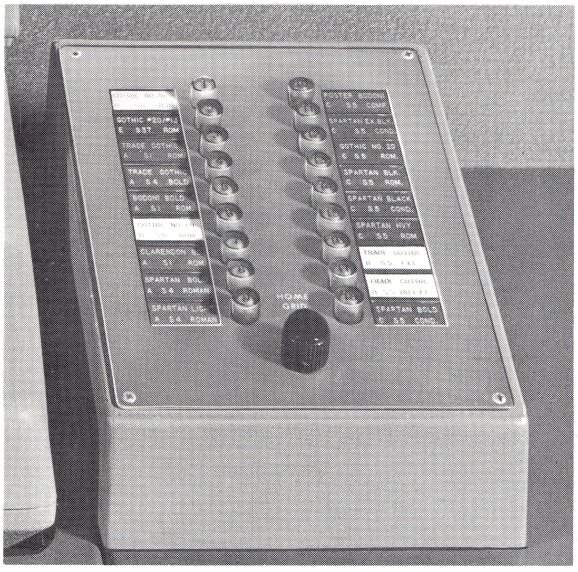

Righ-hand Console Panel, with buttons for eighteen grid or font selections.

THE LEFT-HAND CONSOLE PANEL

This provides controls for the spacing and end-of-line functions (see details later). It also contains a Tape Advance button, a button for inserting a Stop Photo Unit signal in the tape, and main Keyboard Unit power switch with "On" and "Ready" pilot lights.

THE RIGHT-HAND CONSOLE PANEL

This panel provides pushbutton selection of type fonts. Up to 18 fonts are available at any one time. Font designation nameplates are easily changed to correspond to type faces and positions desired. The Home Grid knob has no effect except on the typewriter: When the font position set by this knob is in use, typing is in black. Selection of any other font position causes ribbon shift resulting in typing in red.

WIDTH CARDS

A width card is a simple printed circuit that is quickly and easily inserted into the Keyboard Unit. It is used to assign a width to each character in a given type font. Because widths of characters vary from one type design to another, each type font requires a different width card.

A Linofilm System keyboard will set type from up to 18 different type fonts with a given machine setup. Additional fonts may be introduced by simple hand work. Corresponding to the 18-font capacity, located at the upper right corner of the Linofilm Keyboard Unit's front panel is an enclosed location where 18 width cards may be plugged in. This location is called the width card bin.

Behind the door of the width card bin are 18 horizontal slots for housing the width cards. The slots are numbered at both ends to insure that cards are plugged in straight and in the proper place.

Select a width card, holding it with the identification tag right side up and facing you. This position indicates the front as well as the top of the width card. Choose a

A Linofilm width card, which provides coded widths for the characters of one font.

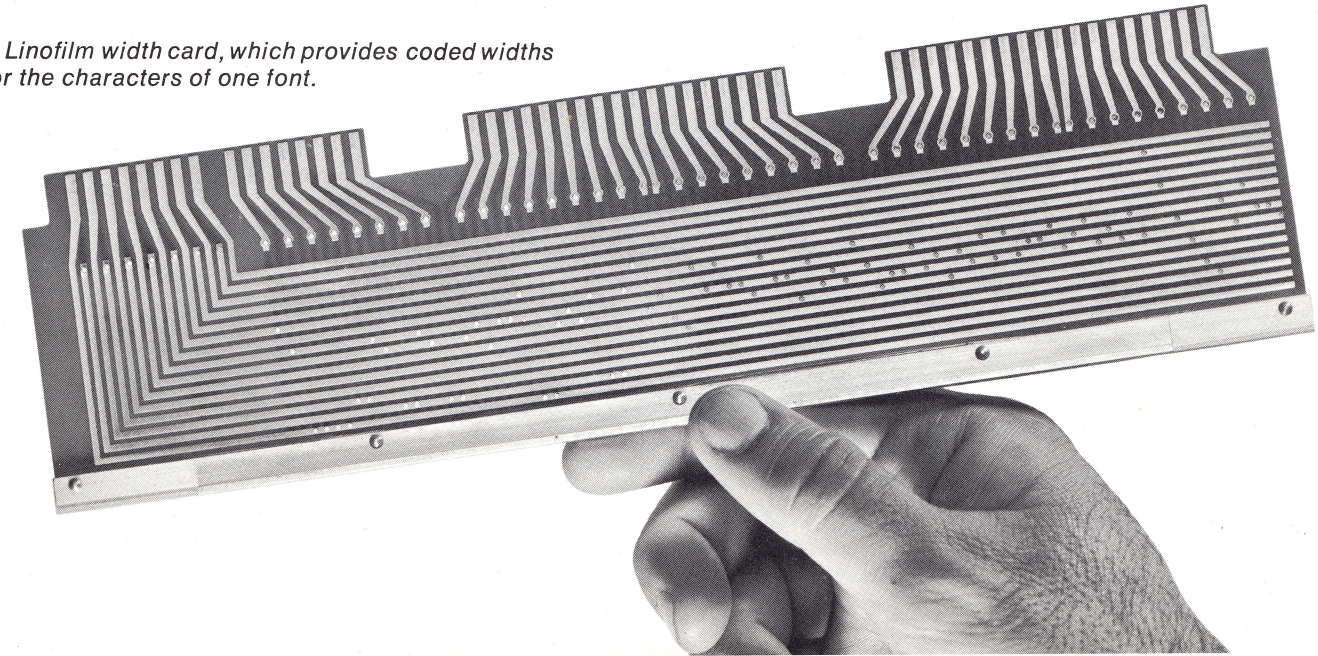

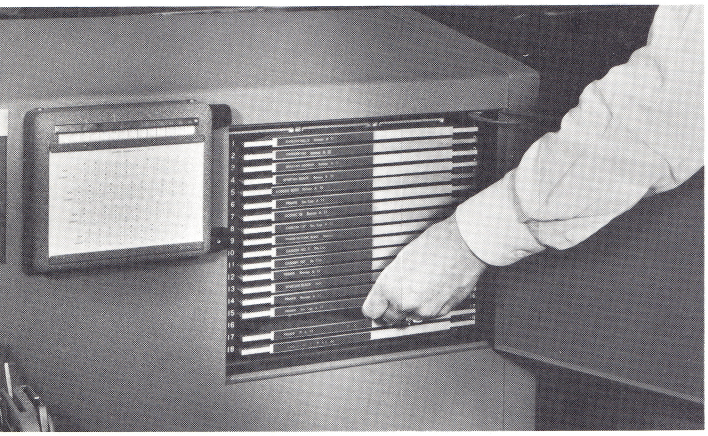

Width Card Storage Bin, with slots for 18 width cards.

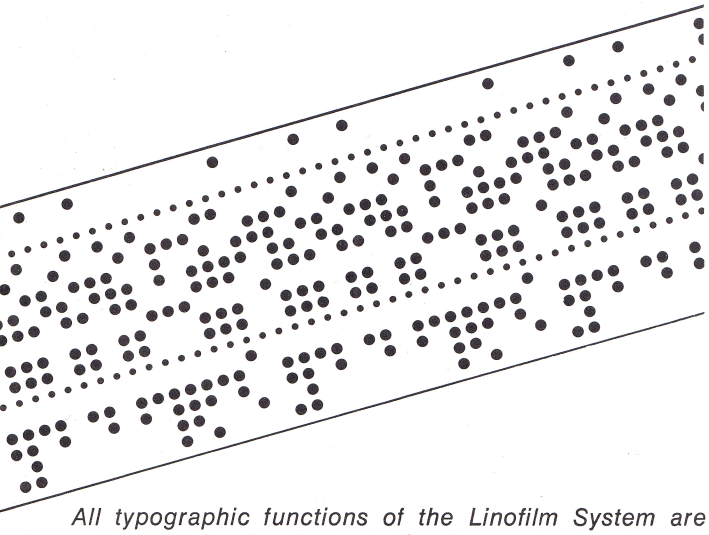

All typographic functions of the Linofilm System are called out by the 15-level Linofilm perforated tape.

Illustrating the simplicity and flexibility of grid changing in the Linofilm Photo Unit.

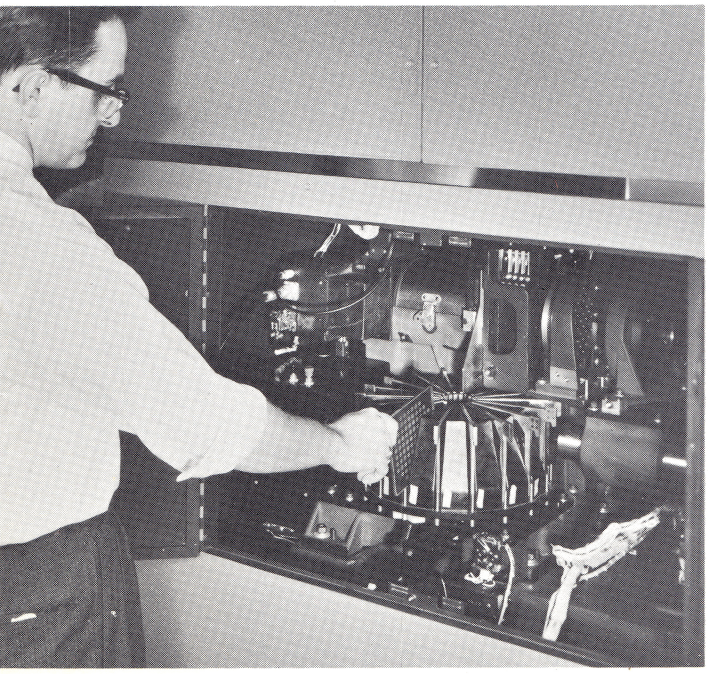

slot in the width card bin. Insert the card in this slot, making sure the card is alongside the same slot numeral at each end. Push the card into the slot till some resistance is felt, then apply considerable force evenly with both hands till width card is fully seated.

A Keyboard Unit will operate with any number of width cards in place, up to 18.

Identification Tag: Shipped with each new width card is a small engraved tag carrying the same information as on the front edge of the width card. This rectangular plastic tag is to be placed in the proper numbered position on the right-hand console panel of the Keyboard Unit—corresponding to the width-card position number used. The operator can then see at a glance which fonts are available, and in what positions.

THE PERFORATOR

Bear in mind that the purpose of the Keyboard Unit is to produce the paper tape that controls actual typesetting in the Photo Unit. The perforator mechanism is the part of the Keyboard Unit that puts the holes in the tape.

Parts that normally concern the operator include tape supply reel, punched tape takeup reel, punch block, and chad receptacle which collects the "confetti" produced by the punching.

Tape can be moved backward by hand with a knob at front of the perforator assembly. It can be advanced by using the Tape Advance button on left-hand console panel or on the perforator assembly.

An opening in the desk-top of the Keyboard Unit makes it possible to inspect the perforations. If necessary the machine may be operated with the perforator mechanism out in full view of the operator.

GRID RANGES

In the Linofilm System the Photo Unit sets type under automatic control of the punched paper tape by successively making photographic copies of characters. The master characters are on square glass grids, each of which carries a font of 88 different characters. There can be up to 18 grids in a Photo Unit at a given time.

To cover the full point size range of Linofilm with good typographic design throughout, grids are made in three basic ranges or kinds, called the A, B and C range. Labels on edges of grids and corresponding width cards and identification tags make it easy to determine range.

Red Label marked A: 6, 7, 8, 9, 10 and 12 pt.
White Label marked B: 12, 14, 16, 18, 20 and 24 pt.
Blue Label marked C: 18, 24, 30 and 36 pt.

Any one grid will produce type only in the sizes that correspond to its particular range.

Within certain restrictions, additional sizes may be produced by using extended grid ranges D (42 and 48 pt.) and E (48 and 54 pt.).

TO OPERATE THE KEYBOARD UNIT

A piece of copy usually is marked-up prior to the keyboard operation and carries the following information:

(1) Size of type to be set (in points).
(2) Leading space between lines (in points).
(3) Length of line (usually given in picas).
(4) Type face or faces to be used.

It is also necessary to know what kind or kinds of lines are to be set. Will they be justified lines, quadded to the left or right, or centered? (They may vary, of course.)

With the above information in hand, the Keyboard Unit can be set up and tape perforation started.

First of all, turn on the Keyboard Unit with the toggle switch in upper right corner of left-hand console panel. Pilot light marked AC next to this switch should light up, showing that power is on. After half a minute or so, the other adjoining pilot light marked "Circuit" should come on, indicating the Unit is ready for use.

Open the door to the perforator at lower right, below the desk top of the Keyboard Unit. This door is unlatched by pressing in a flush button in its front. Using the black handle on front of perforator assembly proper, pull the perforator out (it rolls easily on rails) till it hits rail stops.

Now hold down the Tape Advance button on left-hand console panel until enough paper tape has been fed through perforator to reach takeup reel. Takeup reel will be turning, but can readily be stopped by hand. Pull off cover plate of takeup reel, and put it aside temporarily.

Insert tape under one of the flexible metal strips around hub of takeup reel. Fold about an inch of tape back on itself around the metal strip. Replace takeup reel cover plate, roll perforator assembly back into cabinet, and close door.

REMOVING TAPE

It is best to break up the job at the Keyboard Unit into sections or "takes" of reasonable length. Otherwise unmanageable lengths of tape and of Photo Unit output paper are produced.

With practice you will learn about where to introduce break-points while keyboarding. Each section or take will be on a separate length of punched tape. At a break-point, first advance tape as previously described. Tear tape while it is advancing, leaving enough to start a new length on takeup spindle.

To remove punched tape: Note that it is wound on a metal "spider" frame with a wide circular flange. Place thumbs on wooden hub of takeup spindle, hooking fingers behind flange. Pull flange forward. Length of punched tape will come along with metal spider. Tape can easily be removed from spider, which is then replaced on takeup spindle.

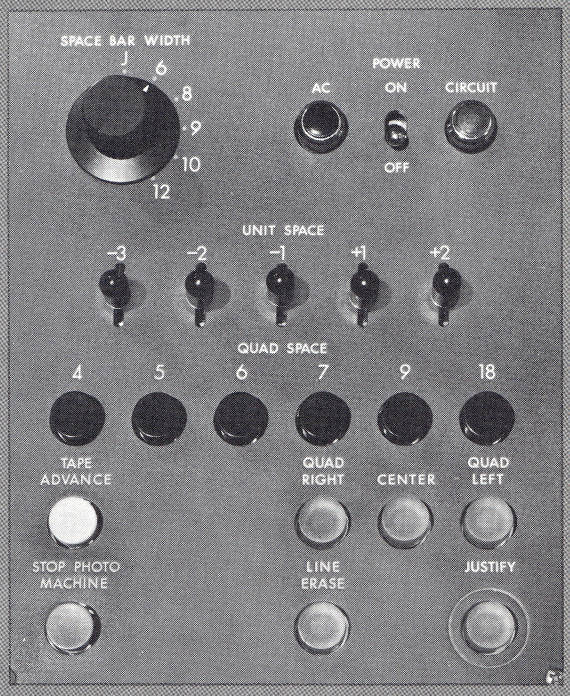

Starting up machine: Operator uses power switch and tape advance control on left-hand Console.

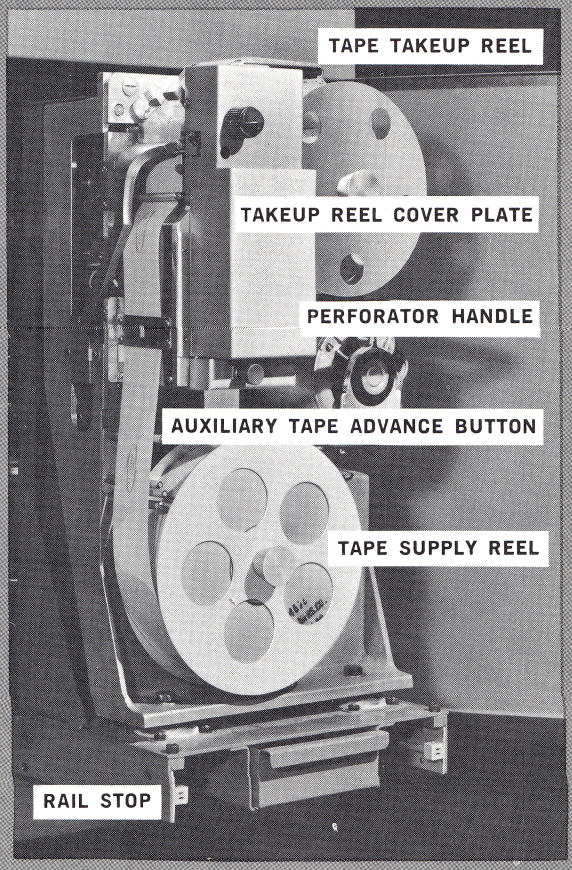

Principal features of perforator, shown withdrawn from Keyboard Unit cabinet.

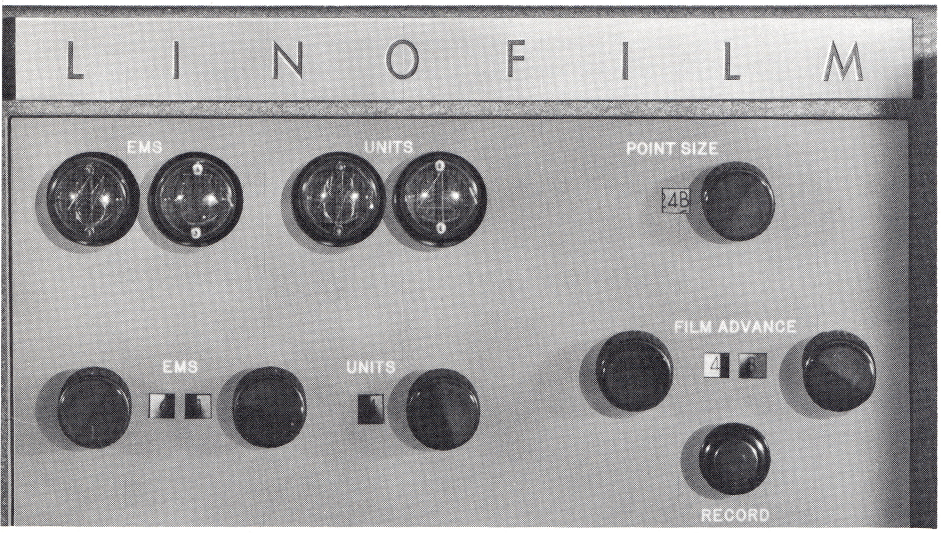

Principal job features such as point size, film advance and line length are set up on the computer panel in front of the operator.

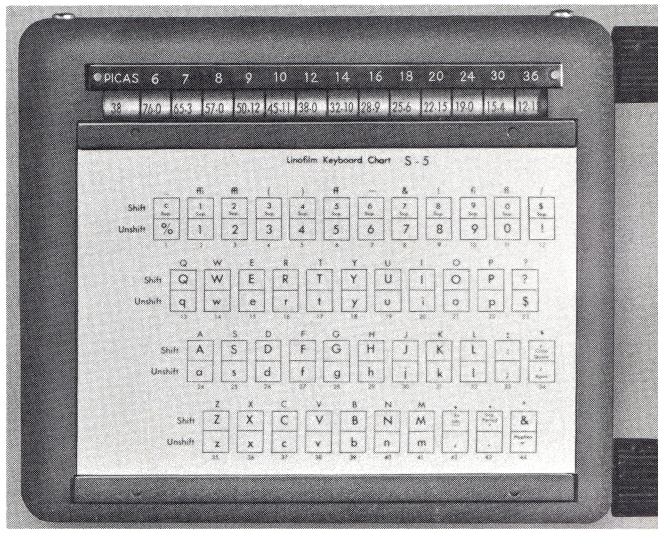

Line length information is converted between em and pica system on conversion chart at operator's right.

SETTING UP THE JOB

Three facts about the job must be set up on the Computer Indicator Panel (just above the typewriter):

Point size
Film advance
Line length

After these have been set, depressing the Record button will cause the information to be punched into the tape. The three settings may be made in any order, but a fixed pattern is a good work habit. We suggest the sequence listed above. The actuation of the Record button must come last.

POINT SIZE

The point size knob is rotated till the number showing through the window alongside reveals the point size and the range desired. Where a given point size can be set from either of two, both are provided on the dial, with range shown by appropriate letter—A, B, or C. Use the one corresponding to the width card you will be using.

FILM ADVANCE

Next set the Film Advance by two knobs: the left knob for tens and the right for single points. Remember, film advance means the total amount of vertical space consisting of point size plus added space between lines.

Example: If we are setting 10-pt. type and want 2 points of extra space between lines, we will set Film Advance at 10 plus 2 or 12 points. The knobs are turned to set a 1 in the tens position and a 2 in the singles.

Note that "leading" or added space will appear at top, not bottom, of type lines affected by a given Film Advance setting.

LINE LENGTH

Line length is next in the sequence of setting up the Keyboard Unit. The instructions will normally be given in picas. Before dialing line length into the Keyboard Unit, the picas must be converted to ems and units of the type size being set. To make this conversion from picas to ems and units, a pica-em conversion chart device is provided above and to the right of the typewriter.

To convert line length, use knobs at right side of chart to rotate internal scale till the specified line length in picas appears at far left end of transparent window of conversion chart. Then follow the fixed metal scale fastened along top of the transparent window until you find the point size of type you will be setting. Under this point size you will find the desired line length conversion expressed in ems and units.

Take this information and using the Ems and Units knobs on Indicator Panel rotate the dials beside the windows until the proper em and unit figures are shown.

In the accompanying example, a 16½-pica line length set in 10 pt. type is converted to 19 ems and 14 units. The 19 for ems is followed by a hyphen and then 14 for units, as it appears on the conversion chart.

RECORD

Having set up point size, film advance and line length, press the Record button on Computer Indicator Panel. The perforator will punch the code holes, and the "nixie" tubes will display the full line length (in ems and units) which has been selected.

TYPE FACE

Make sure that all Width Cards needed for the job have been plugged into position in the Width Card Storage Bin. Also make sure that the identification tags have been placed in the corresponding positions adjoining the 18 numbered buttons on the right-hand console panel.

Then select the first type face needed, in the proper range, by pressing the appropriate button on the right-hand console panel. Firm pressure will make this button light up and will record a font position identification code in the paper tape.

The range which appears in the point-size window on the Computer Indicator Panel must match the range shown on the width card and the identification tag.

To change type faces in a line, simply select another face in the same range and press corresponding button on right-hand console panel. This can be done as many times as needed.

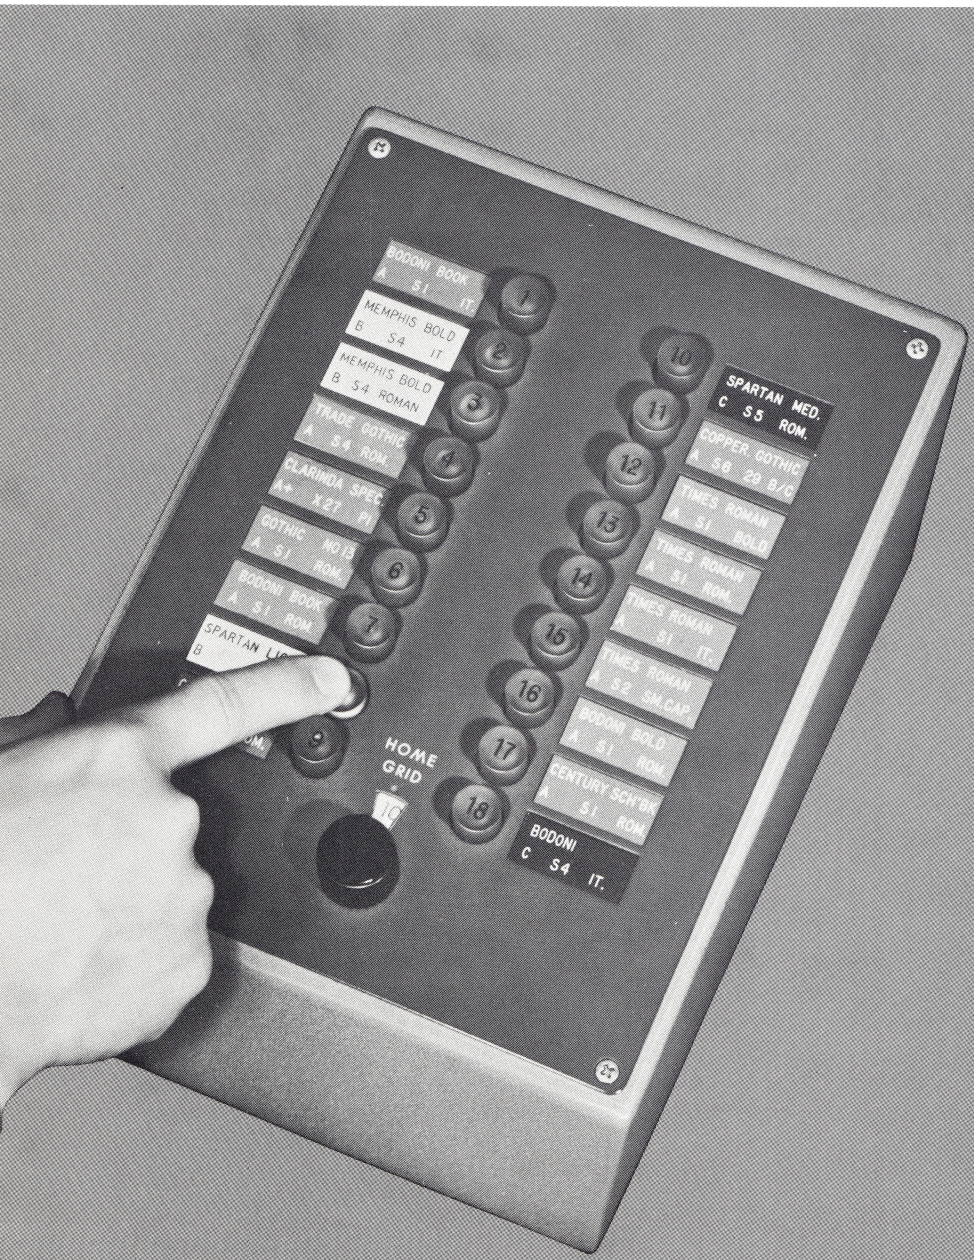

Making a font selection or change at the right-hand Console Panel.

The Linofilm grid contains a font of 88 characters.

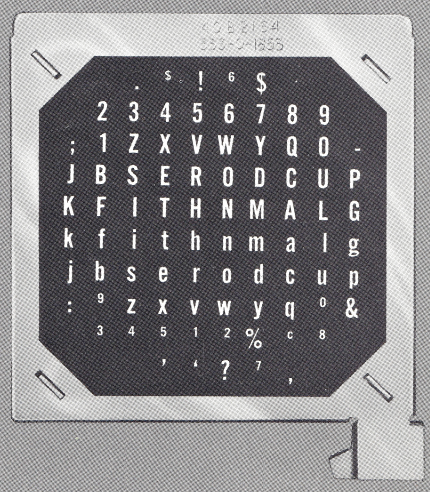

Space bar width control, for selecting fixed or justifying space under typewriter space-bar control.

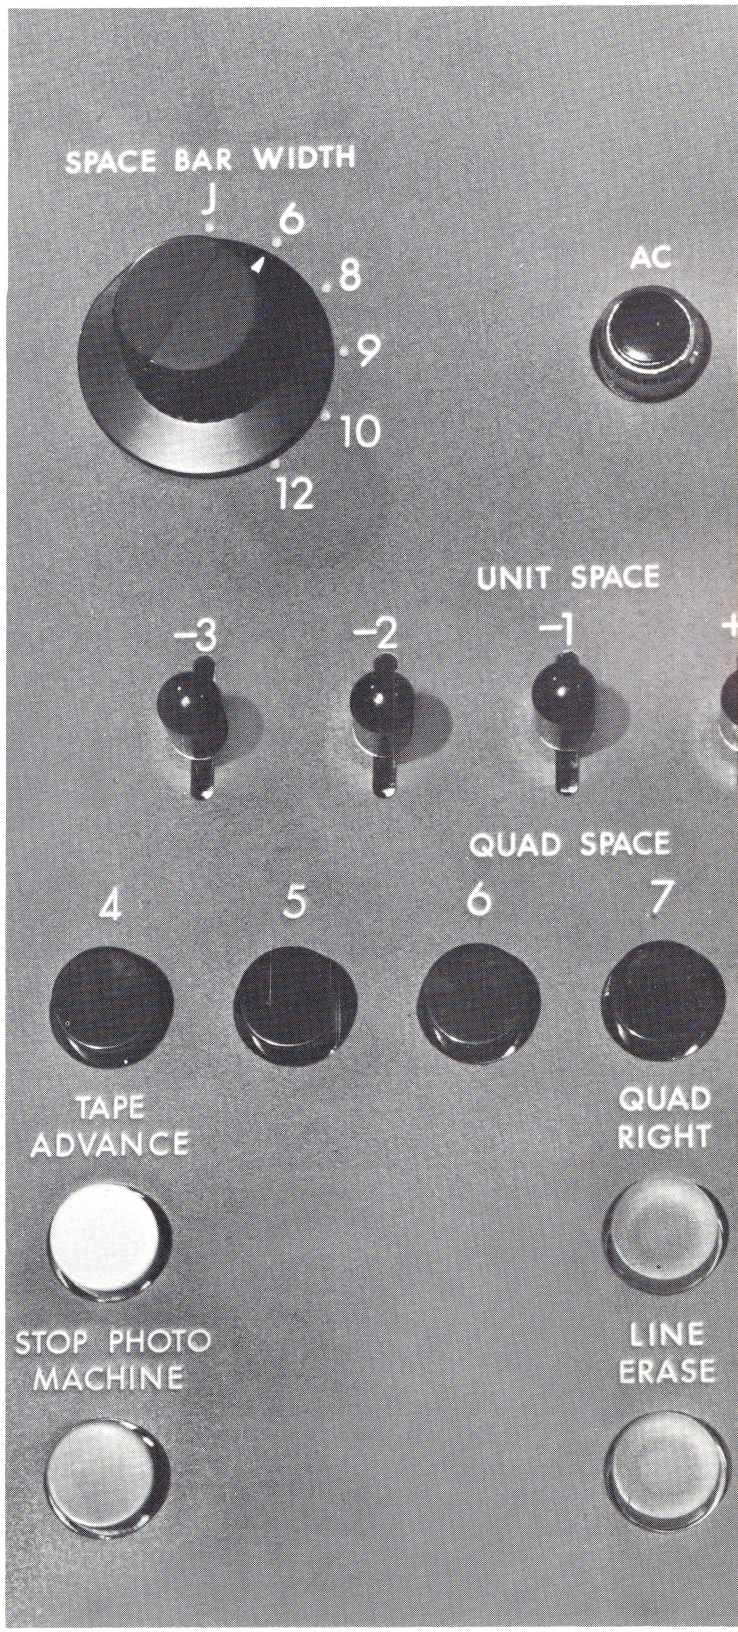

SPACE BAR WIDTH

A knob with this designation is located in the upper left corner of the left-hand console panel. The setting of this knob determines what kind of space is obtained when the spacebar of the typewriter is pressed.

With the Space Bar Width knob set at position marked 6, each depression of the typewriter spacebar will punch a code in the tape that will result in setting of a space 6 units wide (6/18 em, or one-third of an em). This is often considered a desirable amount of interword space to use in lines which will not be justified.

For lines which are to be justified—that is, expanded to fit exactly the previously set line length—the Space Bar Width knob *must* be set in the position marked J. This is the only condition under which the special code and other information will be punched in the tape that will result in justification (expansion) of lines set shorter than the full line length.

It is not generally desirable to include J-type (justifying) spaces in lines which are ended with Quad Left, Quad Right or Center line-ending signals. When this is done, such spaces may expand excessively, giving an unwanted appearance to the line. In quadded or centered lines, it is usually best to use fixed (such as 6-unit) spaces between words. *Note:* Fixed spaces may alternatively be produced by use of the Space Bar Width knob, or by use of the Quad Space buttons.

The Space Bar Width knob may be set or reset at any time. A change in its setting does not require new use of the Record button. A line can even be set with a mixture of fixed and justifying spaces through use of the Space Bar Width knob.

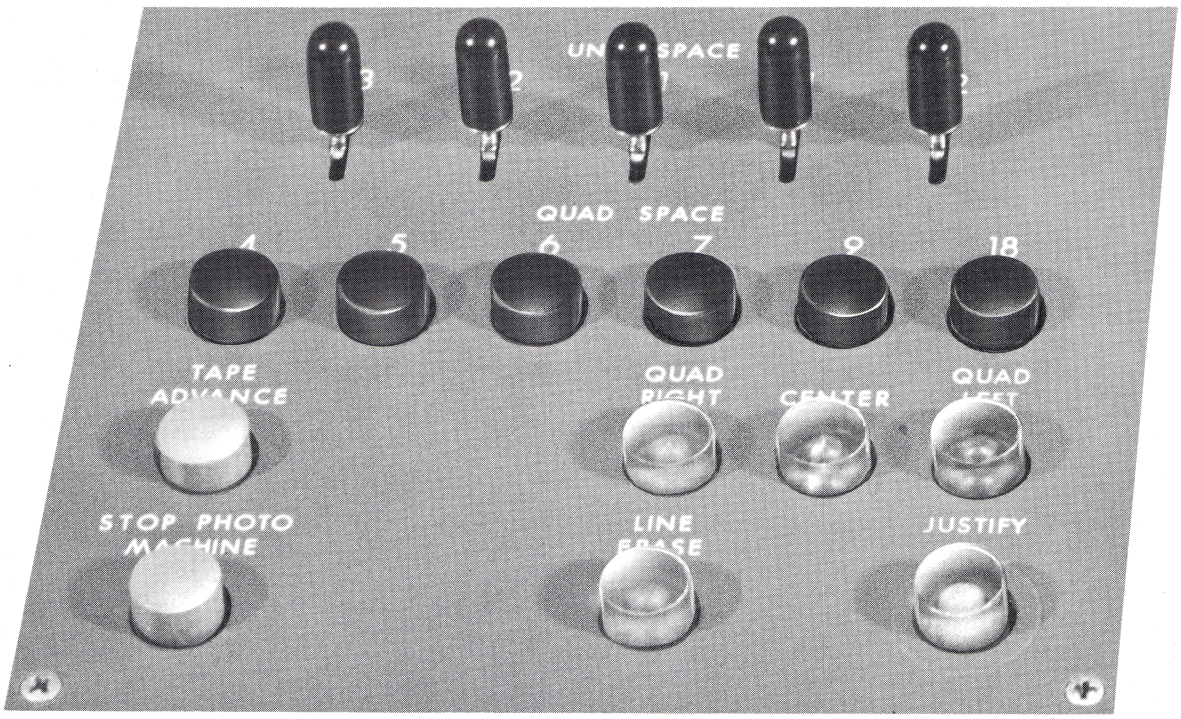

Unit and quad space controls on left-hand Console Panel.

QUAD SPACES

The row of six pushbuttons marked Quad Space, on the left-hand console panel, is used to "set" fixed spaces at any time during composition in the same way as characters are set. Press one of these buttons at a time, repeating or mixing them as needed.

Each time a Quad Space button is pressed, a code is perforated into the tape representing a corresponding amount of space in the line. The line remainder shown on the nixie tubes is also reduced by a suitable amount.

A common use for quad spaces is in paragraph indenting: the space, often specified to be 1 em (18 units), at the left-hand end of the first line of each paragraph in many styles of composition. When starting such a line, "set" the space desired, as if it were one or more characters, by pressing quad-space button or buttons.

Quad spaces are also used in tabular composition where a word or number must be started at an exact predetermined place in the line. Press quad-space buttons, one at a time, until nixie tube indicator shows the desired position. Then set type characters as required.

Sometimes a particular space width must be used very frequently: for example in numerical tabular work where figures are normally 9 units wide and spaces must be set to line up vertically with figures (in columns). In such a case the 9-unit quad-space button can be pressed as needed. A faster way may be to turn the Space Bar Width knob to 9, in which case a 9-unit space is set every time the spacebar on the typewriter is pressed.

Space at either end of a line of type is not normally set with the quad-space buttons. It is faster to handle such cases with the quadding and centering functions. (See section on Line Ending Functions.)

UNIT SPACES

Along with the other spacing controls grouped on the left-hand console panel will be found a row of lever switches marked Unit Space. They enable the operator to add space to or subtract from individual type characters, in units (18ths of an em). Like all the numerical markings on this panel, they are marked in units.

Each unit-space lever switch has three positions: down (toward operator), center, and up (away from operator). Center is the normal or "off" position, and either of the other positions produces the added or subtracted space controlled by that switch. A switch handle may be pulled down against a return spring for temporary use, or for longer use may be pushed up into a locking position. In either case the unit-space switch must be in an actuated (off-center) position throughout the time the affected character or characters are being set.

Space is always added to or subtracted from the left-hand side of a character. To illustrate, take an example of kerning, or special close-fitting of two adjoining characters. In the word "To," to fit "o" partly under the overhang of "T," set "T" normally; next pull minus-2 unit space switch lever down; then, while holding it there, set "o"; finally let unit-space switch go back to normal or off position.

Linofilm tape shown running in Read/Scan Bay.

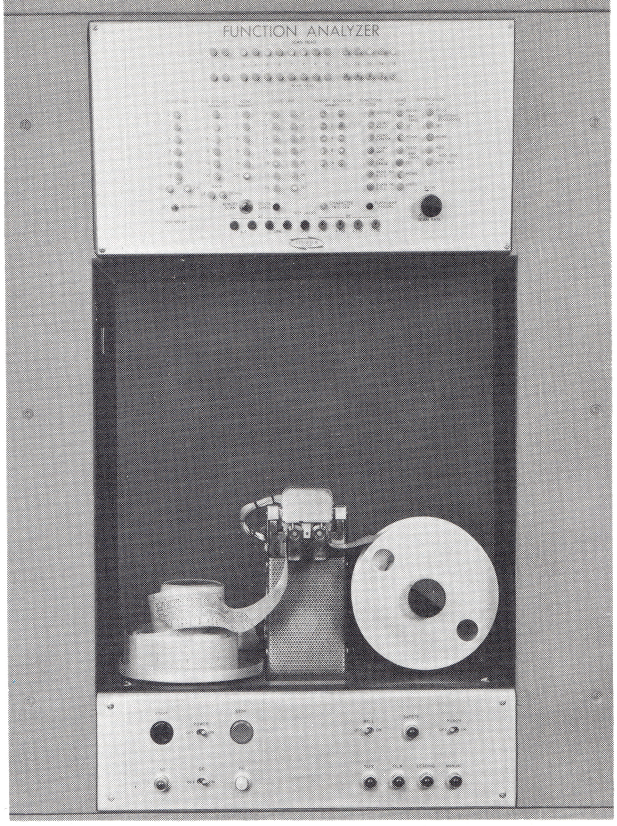

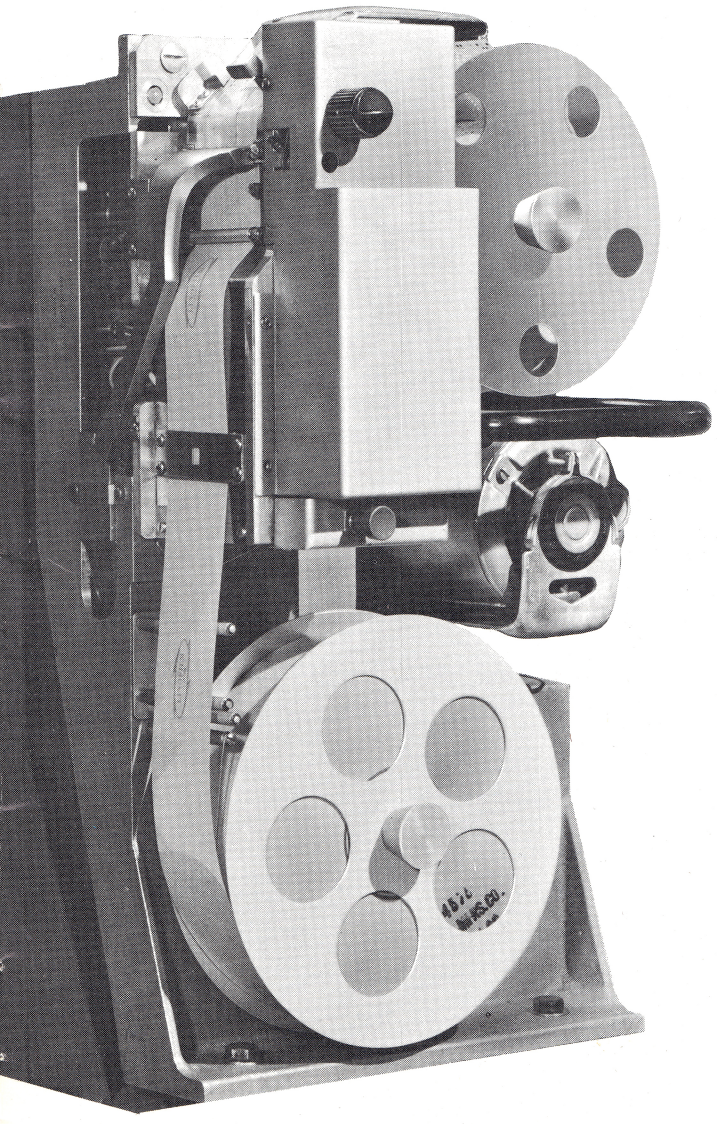

Tape supply and takeup reels in perforator assembly.

When necessary, up to 3 units of width can be added to a character by actuating both the plus-1 and the plus-2 unit-space switches together. In the same way up to 6 units of width can be subtracted by actuating more than one "minus" switch.

There is one limitation in the use of the unit-space switches. The Keyboard Unit will not accept a character of less than four units in width. If an operator should try to subtract several units from a narrow character, the Line Erase button may light up and the keyboard lock, indicating a rejection.

TAPE ADVANCE; STOP PHOTO

These two controls appear in the lower left corner of the left-hand console panel. The Tape Advance button moves tape forward through the perforator as long as the button is held down. Every time it is pressed, it puts and end-of-tape signal in the tape which stops the Photo Unit. This signal is wanted at the end of a "take" or job, but it is not desirable at the beginning. To run out a length of tape free of the stop signal at the start of a job, hold Tape Advance button down; tear off first inch or two of tape run out which contains the stop code; then, continuing to hold the button down, advance enough tape to attach to takeup reel. All this must be done on one actuation of the Tape Advance button.

To insert a signal for stopping the Photo Unit without advancing tape, use the Stop Photo Machine button. This signal is used to draw the Photo Unit monitor's attention to any special instructions he may need during the job. The most common condition requiring this is a change from paper to film in Photo Unit, or a change in the fine-adjustment leading control at Photo Unit. Any such instructions can be written out on the tape.

KEYBOARD UNIT SETUP: REVIEW

The step-by-step Keyboard Unit operating procedure we have covered runs as follows:

Turn on Power switch; wait till Circuit light comes on.
Insert width cards and identification tags.
Set point size.
Set film advance.
Convert line length from picas to ems and units.
Set line length.
Record (press Record button).
Select type face (grid).
Set Space Bar Width knob.
Set line of type at keyboard.
End line (one of five buttons).

Other related operations include use of Tape Advance, Stop Photo Machine, Unit Space and Quad Space buttons; also use of the Linomix attachment. All these are discussed in sections below.

To familiarize themselves fully with the standard operating procedures, new operators should go through the entire sequence of steps a number of times, setting several lines of type each time and using as many machine features as possible.

Note: Incomplete or inconsistent setups given to the Keyboard Unit will cause the typewriter keyboard to lock so keys will not depress. Or the type face selection at right-hand console panel may not be accepted, as shown by the fact that font select button when pressed will not stay down and will not light up. The corrective procedure is to Line Erase, then go back over the information setup procedure in proper sequence.

LINE ENDING FUNCTIONS

When all the contents of a line of type have been keyboarded, the fact that the line is ended must be signaled to the Linofilm equipment. This is done in a way which at the same time tells the equipment how to handle the line.

Every line is ended by depressing one of five buttons grouped together conveniently at the lower right corner of the left-hand console panel. They carry abbreviated designations for Quad Left, Quad Right, Center, Line Cancel, and Justify. (Note that a line is *not* ended by using the Carriage Return key on the typewriter. This will return the typewriter carriage but has no other effect.)

"Quadded" lines, obtained by using the Quad Left and Quad Right buttons, are those in which type (and any keyboarded spaces) in the line is moved flush against the left-hand or right-hand limits of the line length, respectively. The last line in this paragraph is set Quad Left. Any left-over space in the line appears at the right.

In lines ended by the Center button, keyboarded content is centered in the line length set up on the Keyboard Unit, with any excess space divided equally to right and left.

Justified lines are those which will be expanded to the full line length when assembled in the Linofilm Photo Unit. Such a line cannot be produced unless it contains one or more justifying spaces. These are spaces produced by depressing typewriter spacebar *with* Space Bar Width knob set at position J. In addition, a justified line cannot be produced unless enough type and spaces have been set to enter the so-called justification zone, as indicated by a buzzer tone and lighting up of the Justify button on the keyboard console.

The Line Erase button ends a line by punching a tape code that causes the Linofilm Photo Unit subsequently to ignore the line. In addition to eradicating lines containing errors (if noted before the line is ended in another way), this function is useful in providing for "cast-off" lines, which are set only for trial or calculation purposes.

LINOMIX

The Linomix attachment enables the operator to set up a Linofilm Keyboard Unit for any three combinations of point size, line length and film advance. The attachment mounts on top of the Keyboard Unit just above the Computer Indicator panel.

For example, on a book or pamphlet job the keyboard might be set up for the headlines, body copy and footnotes before starting. On coming to a point of change from body to heads, instead of resetting all new data in the Keyboard Computer Control Panel, the operator simply switches to one of the other preset combinations on the Linomix attachment.

There are many other uses for the Linomix attachment. To handle the occasional short lines when required for any reason, set one of the combinations for the shorter line length but with point size and line length same as for body. In effect with one Linomix attachment you have three Computer Indicator Panels.

Two combinations of point size, film advance and line length can be set up on the two groups of setting knobs provided on the Linomix panel. The third combination is set up on the regular Computer Indicator Panel. The operator selects one of the three combinations by using the long selector knob at center of Linomix panel.

Note that pilot lights at extreme upper right and left of Linomix panel show which of the combinations set up on the Linomix is in use.

After selecting a setup combination, the operator must always Record—using either the Record button on the Linomix or the one on the Computer Indicator Panel.

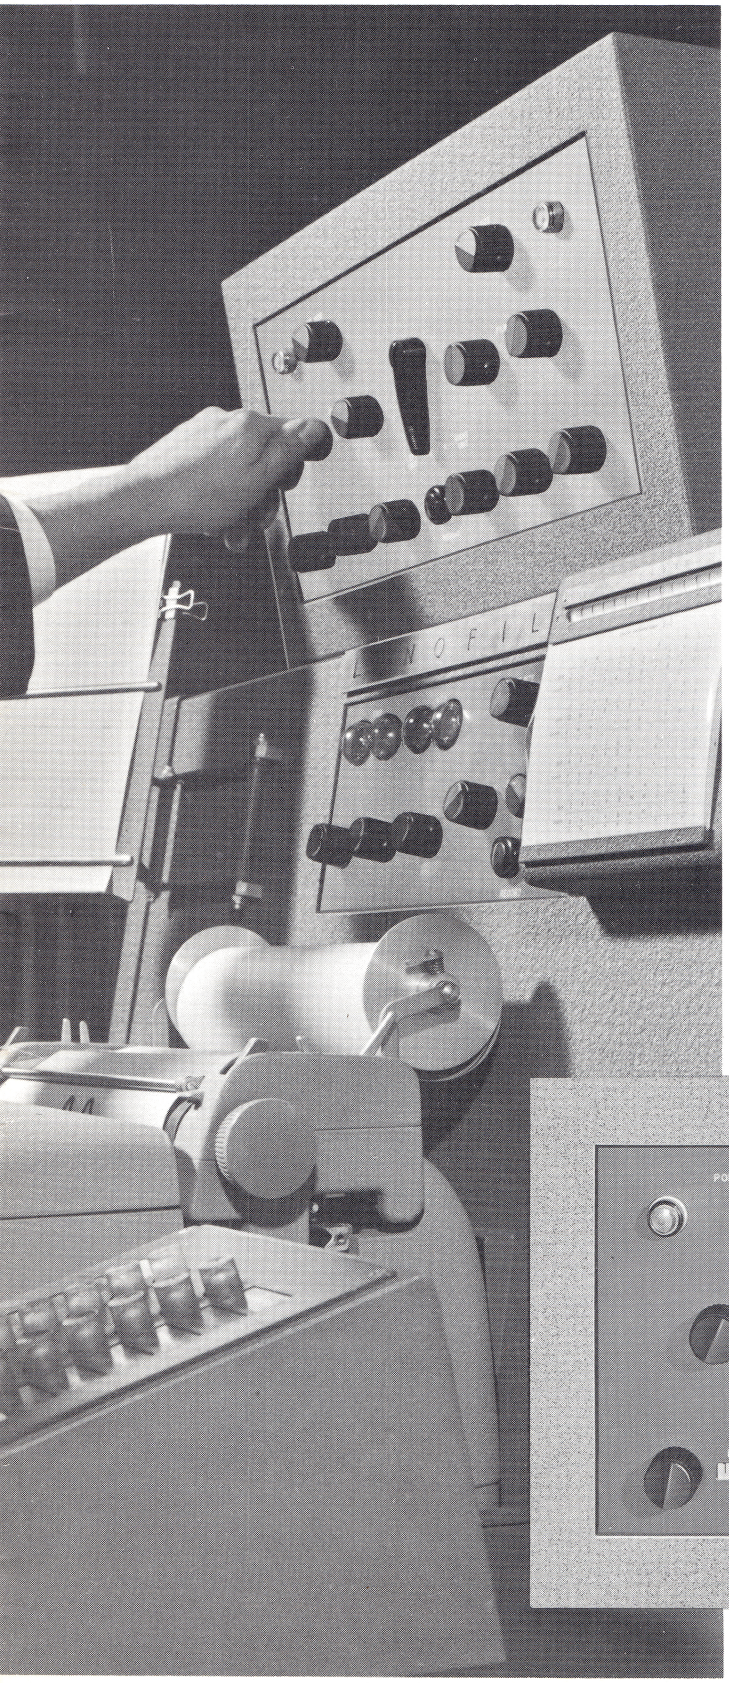

The Linomix panel for presetting alternative styles of lines in mixed composition.

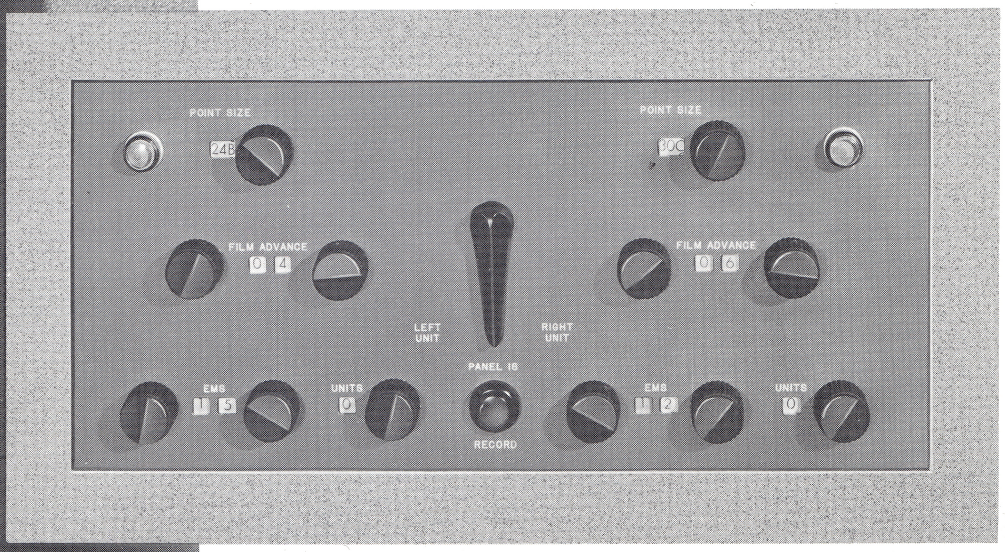

MERGENTHALER LINOTYPE COMPANY
29 Ryerson Street, Brooklyn, N. Y. 11205
A Division of ELTRA Corporation

ATLANTA	300 Luckie Street, N.W., Atlanta, Georgia 30313
BOSTON	Park Square Building, Boston, Massachusetts 02116
CHICAGO	531 Plymouth Court, Chicago, Illinois 60605
DALLAS	1350 Motor Circle, Dallas, Texas 75247
LOS ANGELES	1212 Albany Street, Los Angeles, California 90015
NEW YORK	300 East 42 Street, New York, New York 10017
SAN FRANCISCO	155 Twelfth Street, San Francisco, California 94103
CANADA	Canadian Linotype Company Toronto · Montreal · Winnipeg · Vancouver

Mergenthaler

Printed in U.S.A. LF1.23 9-66-5M